

 
OPERATING INSTRUCTIONS

Please read this manual carefully and follow all safety rules and operating instructions before using the appliance.

PARTS AND FEATURES	1
INSTALL YOUR WINE COOLER	2-4
CHANGING THE LIGHT BULB	5
OPERATING YOUR WINE COOLER	6
CARE AND MAINTENANCE	7-8
MAINTENANCE	9
TROUBLE SHOOTING GUIDE.....	10-11

MODEL:Vinobox 28 GC MODEL:Vinobox 12 GC
--


PARTS AND FEATURES

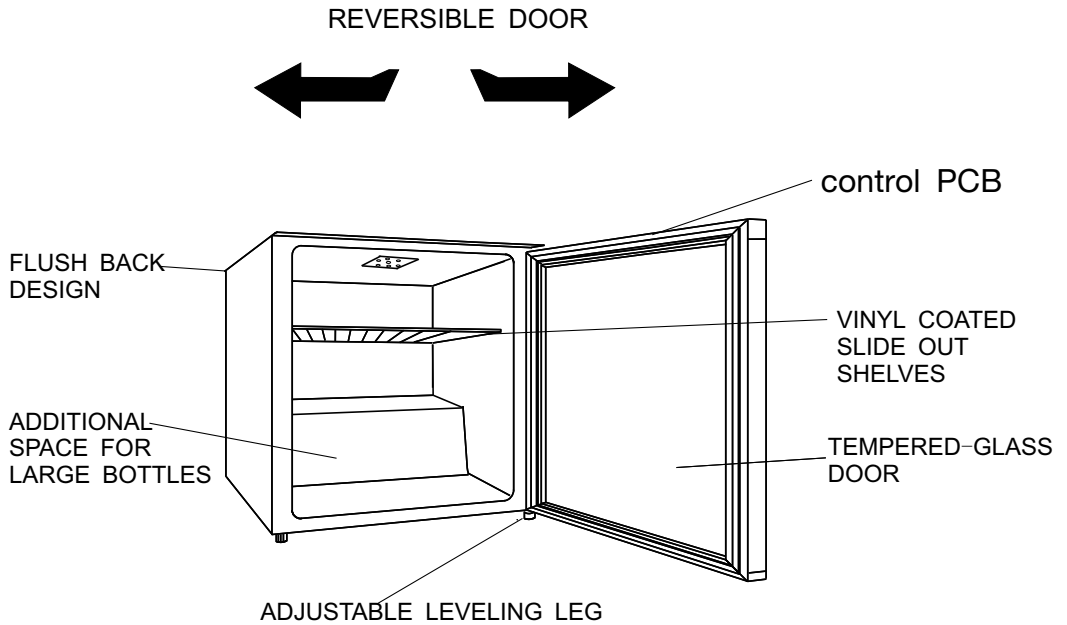

INSTALL YOUR WINE COOLER


Before using your wine cooler, remove the exterior, interior packing and any other thing.

 - Keep 50 mm of space between the back of the appliance and the wall and 100 mm between the side and the wall.
- The appliance is only applied with power supply of single phase alternating current of 220V~ 50 Hz. It is advisable to install a fuse of 6 A in the circuit. Use a special socket instead of a common one with other electric appliance.
- Do not lengthened the power cord or folded into coil during operation. keep the power cord away from the compressor because high surface temperature.

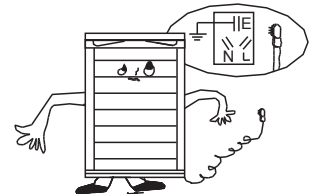


INST ALL YOUR WINE COOLER

 - Avoid locating the appliance in moist areas. Too much moisture in the air will cause its metal parts rusty. Do not spray water to the appliance, this will cause electriy shock.
- Locate the wine cooler away from direct sunlight and sources of heat(stove, heater, radiator, etc.).Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption.
- Place your wine cooler on a floor that is strong enough to support the freezer when it is fully loaded. Do not place the wine cooler on any soft material such as foam plastic, etc. Do not place anything that can make echo near the wine cooler. To level your wine cooler, adjust the legs at the front of the wine cooler.

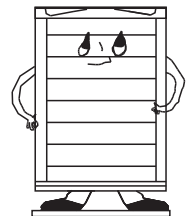


INST ALL YOUR WINE COOLER

 - Keep your wine cooler away from any volatilizable or combustibles such as gas, petrol, alcohol, lacquer and banana oil, etc. The above-mentioned objects can not be stored in the freezer.

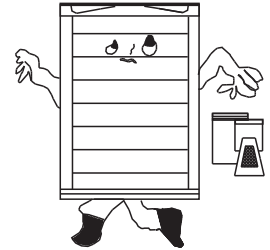

 - Be sure the wine cooler stays in the upright position during transportation.

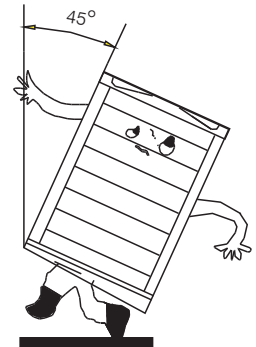


Changing the Light Bulb

NOTE:


All parts removed must be saved to do the replacement of the light bulb.

Before removing the light bulb, either unplug the refrigerator or disconnect the electricity leading into the refrigerator at the main power supply. Failure to do so could result in electrical shock or personal injury.

 - Remove the light bulb cover④by pulling the bottom end of the light bulb cover gently.
- Remove the two screws②
- Replace the Pcb board. ①
- Replace the light bulb cover④ .

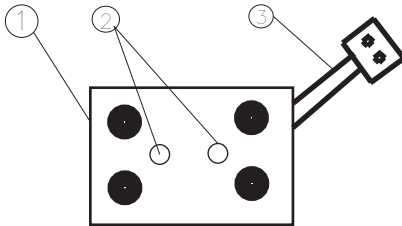


- ① Pcb board
- ② Screws
- ③ Line

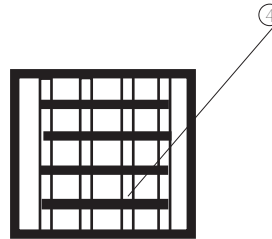 

- ④ Bulb Cover

OPERATING YOUR WINE COOLER

 Temperature Control

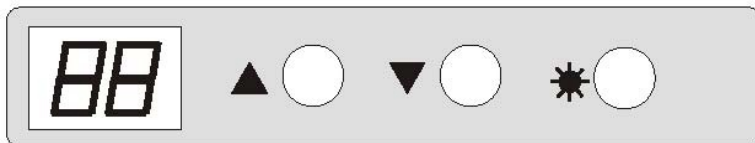


- When the power is through, the product will begin cooling, the cooling temperature is 8 degree.
- If you want to adjust temperature, you can press “▲” and “▼”. When press “▲” again, temperature will rise 1 degree, press the “▼” temperature will decline 1 degree.
- If you want to open product internal light, you just need to press “☀” one time. When you press this button again, internal light will close in 10 minutes.
- When compressor working more than 8 hours, compressor will stop working for 15 minutes, during this time compressor will begin removing frost automatically.
- Adjusting temperature range of produce is 5-20 degree.
- If you want to cut off the power of product, please pull off the power plug.

CARE AND MAINTENANCE


Cleaning Your WINE COOLER

 - Before cleaning, pull off the power plug.
- Clean your wine cooler once every two months.
- Wash the inner and outer surface with a wet cloth.
- If the wine cooler is very dirty, wash it with a neutral detergent first, then use clean cloth to wipe it.

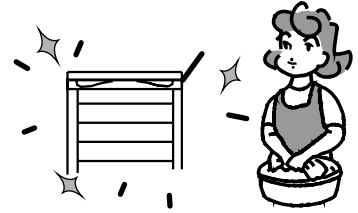

Care the Plastic Products.

 - Be careful to protect the sealing rubber bars of the door, it should be kept clean at all of the time.
- If the plastic parts in wine cooler remain contaminated by oil (animal or vegetable) for a long time, they will be easily aged and cracked and smell bad. So you should get the habit of cleaning it regularly.

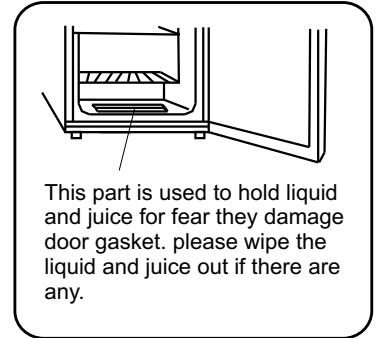


This part is used to hold liquid and juice for fear they damage door gasket. please wipe the liquid and juice out if there are any.

CARE AND MAINTENANCE

Notes

 - Be sure to unplug the wine cooler before cleaning.
- Do not spray water on the wine cooler, the water will cause the metal parts rusty and weaken the insulation.
- The following things will damage the lacquer coat and plastics, so you cannot use to clean. hot water, diluent, petrol, alcohol, kerosene, washing powder, cleanser, alkalinous detergent, acid, Chemical cloth, etc.

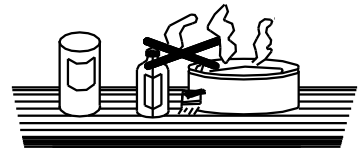

5.Maintenance

- ★ This appliance is not intended for use by persons(including children) with reduced physical, sensory or mental capabilities,or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ★ Children should be supervised to ensure that they do not play with the appliance.
- ★ **WARNING:**Do not damage the refrigerant circuit,and keep ventilation openings, in the appliance enclosure or in the built-in structure,clear of obstruction .
- ★ Don't use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- ★ Don't use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

TROUBLESHOOTING GUIDE

You can solve many common freezer problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem before calling the service.

Wine cooler does not operate.	<ul style="list-style-type: none">• Not plugged in.• The circuit breaker tripped or blown fuse.
Wine cooler is too cold.	<ul style="list-style-type: none">• The temperature control dial may be set too high
Wine cooler is not cold enough.	<ul style="list-style-type: none">• Check if the temperature control setting is too high.• External environment may require a higher setting.• The door is opened too often.• The door is not closed completely.• The door gasket does not seal properly.• The wine cooler does not have the correct clearances.
The defrosting water overflows inside the wine cooler and onto the floor.	<ul style="list-style-type: none">• Check if the drain pan is full.
A sound of flow can be heard.	<ul style="list-style-type: none">• It is the sound of refrigerant flowing, not a fault.

TROUBLE SHOOTING GUIDE

<p>the cabinet's side panel heat up.</p>	<ul style="list-style-type: none">• It result from the dissipation of the heat from inside the cabinet, not mean something is wrong with the wine cooler.
<p>Condensation forms on the outside of the wine cooler.</p>	<ul style="list-style-type: none">• Condensation will form on the outside ofthe wine cooler if it operate in moist areas,it does not a fault, just wipe it dry.
<p>The wine cooler seems to make too much noise.</p>	<ul style="list-style-type: none">• The wine cooler is not level.• The wine cooler bump the wall.
<p>In winter, the wine cooler does not operate.</p>	<ul style="list-style-type: none">• The temperature control dial may be set too high.
<p>In summer, the wine cooler does not stop.</p>	<ul style="list-style-type: none">• The temperature control dial may be set too low.• There is bad ventilating around the wine cooler.• The door is not closed completely• The door gasket does not seal properly.• The door is opened too often.